

索引表

S0-0	索引表
S0-1	鋼筋標準圖(一)
S0-2	鋼筋標準圖(二)
S0-3	鋼筋標準圖(三)
S0-4	鋼筋標準圖(四)
S1-1	壹層結構平面圖(GL1)
S1-2	貳層結構平面圖(GL1),壹層結構平面圖(GL2)
S1-3	叁層結構平面圖(GL3)
S1-4	貳、參層結構平面圖(GL3)
S1-5	肆層、屋頂層、突一層結構平面圖(GL3)
S2-1	TG1, TG2, TG4, TG6a, TG7, TG9, TG9a, TG19a, TG19b, TB1, FG3, FG4a, FG5, FG6, FG8, FG8, FG10,
S2-2	TG11a, TG11b, TG15a, TG15b, TB2~TB10, TB12, TB6a, TB6b, TB13a, FG12~FG14, FG16~FG18, FG18a, FB11,
S2-3	TB13, FB14~FB24, FB16a, FB22a, FB01, FG14a,
S2-4	2F G1~G10, G12~G14, G4a, G6a, G11a, G11b, B1, B2,
S2-5	2F G15a, G15b, G16~G18, G19a, G19b, B3~B6, B8~B12, B6a,
S2-6	2F B13, 下 B19, 下 B14, B15~B18, B20~B24, B13a, B16a, B22a, 3F 上、下 G1, G2, G7, G8, 水箱、樓梯、牆剖面配筋
S2-7	3F G5, G6, G10, G14, G18, G6a, G14a, G18a, B1~B5, B16~B19, B21~B23, B16a, B22a, B01, 2F B14,
S2-8	FG01, FB1, FB2, 2F b01, g01~g03, 3F G01, FS3, FS5, 1S3, 1S5, 2F S0, S1, 1F PC, 上 2F B19, 牆角隅補強筋, 牆基礎配筋,
S2-9	1F~2F C1~C13, 2F S2~S4, S01~S03, 3F S1~S3, S01, S0, 2F~3F CS1, C1剖面配筋示意圖,
S2-10	F~3F G20, T~3F G21~G23, 基礎剖面配筋示意圖,
S2-11	F~3F G24, T~3F G25~G27, Tg1, Tg2,
S2-12	F~3F G29, T~3F G27~G30, Fg1, FS6, FS7, 3F S4~S8, CS1, 2F CS1, 4F S1, CS1,
S2-13	T~4F G31~G34, G36, G37, 4F g1, g2,
S2-14	T~4F G34, G35, F~3F B25, B26, B27a, Tg3~Tg5, Tb6~Tb8,
S2-15	F~3F B28a, T~3F B27~B33, B38,
S2-16	T~4F B35~B37, B39~B41, Tg6~Tg8,
S2-17	T~4F B42~B48,
S2-18	T~4F B49~B53, 3F g1, g2,
S2-19	T~4F B53~B57, 3F g3~g5, g3a, b1, b2,
S2-20	2F~3F C14~C28,
S2-21	F~3F G38, G40, G41, G45, G45a, T~3F G39, G40, G42, Tg9, Tg10,
S2-22	T~3F G43, B58, B59, F~3F G44, B60, Fg11~Fg13, Fg15,
S2-23	F~3F B61, B63, FG46, FG47, FB64~FB66, FB69, FB72, Fg14, F~4F G48, G49, TG48~TG51,
S2-24	TG52~TG54, TB67, TB68, TB68a, TB70, TB71, TB71a, TB73, TB74, TB74a, 4F B61~B64, B66, B69, B72,
S2-25	FB75, FB76, 4F G38~G45, G45a, B58~B60, B65, 5F~6F G38~G40, G45,
S2-26	5F~6F G40~G44, G50~G54,
S2-27	5F~6F B58~B60, B68a, B67, B68,
S2-28	5F~6F B61~B63, B66, B67, B69~B71, B74, B74a,
S2-29	5F~6F G46~G49, B64, B72, B73, B75, B76, RF G38, G40, G41, G45,
S2-30	RF G44, B60~B64, B66~B74, B68a, B71a, B74a,
S2-31	RF G46~G53, B75, B76, R1F G38, G40, G41, G44, G54, B60~B63, 3F g10,
S2-32	3F g8, g9, 4F g3~g8, 5F g1~g7, b1, 6F g1~g6, c, g1, b1,
S2-33	6F g7, g8, RF g1~g5, R1F g1, g2, FS8, FS10~FS12, FS14, 2F S8, 3F g6, g7, S9~S11, 4F S2~S6, 5F S1~S4, 3F~6F CS1,
S2-34	5F S5, S6, 6F S1~S6, S01, S01, RF S01, S1~S5, R1F S01, S02, 2F~RF G39~C43, C42a,
S2-35	2F~RF C44~C55, C45a, 6F C0, 3F C01,